

Ultrafine particle sprayer & Strong wind vacuum



Manual



Notes related with Safety



- ? You should read the notes related with its safety and use it carefully according to them,
- ? The manual should be handed to the final users and the man who is responsible for its maintenance,
- ? After reading the manual, it should be kept at the place where users can always see it.



SM BURE Co., Ltd www,222sm,kr

> 1.bmp (474 X 666)


Components and dimensions of the product



Components

BURE body/chemical bottle/Spare part/Manual/Power cord

Name of components

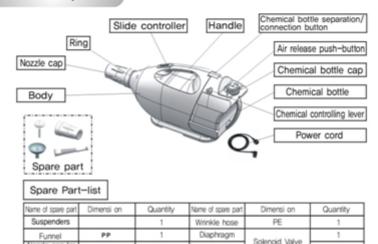

Shaft


Dimensions of spare parts

| Name of product | Weight | Length of wire | Slide switch | Electron valve | Switch | Power | Motor output | Distance of spray | Size of particle | Capacity of chemical | Size (mm) |
|--------------------|--------|----------------|-----------------|----------------|--------|-------|-----------------|-------------------|------------------|----------------------------|----------------------------|
| BURE | 3,0 | 6МТ | 0 | 0 | Х | | | 5 | 10 | | 100010 |
| BURE3 NEW | 2,9 | 2MT | × | 0 | 0 | 220V | 1,250 (W) | ~ | ~ | 3L | 160(W) 550(D) 250(H) |
| BURE3 | 2,8 | 2MT | Х | Х | 0 | | | 10Mt | 50µm | | 250(H) |

Parts and their dimensions



Structure and parts of the product

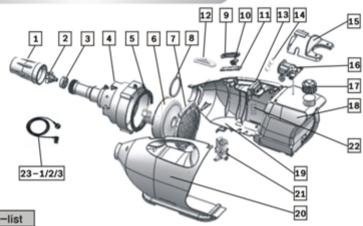

| No | Part-Name | Part-No | Spec | SVC | Remark |
|------|---------------------|-------------|--------------------|-------------------------------------|--|
| 1 | CAP-Nozzle | SM001-001 | pp | | |
| 2 | Air-Nozzie | SM001-002 | PP | | |
| 3 | Support-Nozzie | SM001-003 | PP | | |
| 4 | Case-Motor | SM001-004 | PP | | |
| 5 | Packing Motor | SM001-005 | Rubber | | |
| 6 | Motor-Assy | SM001-006 | AC 220 | | |
| 6-1 | Motor-Assy | SM001-006-1 | AC 105-127V | | |
| 7 | Cover-Motor | SM001-007 | PP | | |
| 8 | Ring | SM001-008 | ABS+Cr | | |
| 9 | Case-Sider | SM001-009 | PP | | Inapplicable to |
| 10 | Sider | SM001-010 | pp | | Bure3 and |
| 11 | Slider_plate | SM001-011 | pp+print | | Bure3 New |
| 12 | Switch-Assy | SM001-012 | AC250V | | |
| 13 | Assy-Connector | SM001-013 | pom+pitting | | |
| 14 | O-ring | SM001-014 | rubber c-8 7,5*1,5 | | internal diameter7.5* external diameter10.5 |
| 15 | Assy-Cover Check | SM001-015 | pp | | 0.00.00.00.00.00.00 |
| 16 | Assy-Check valve | SM001-016 | pom+bs | | |
| 17 | Cap-Tank | SM001-017 | pp | | |
| 18 | Tank | SM001-018 | pe | | |
| 19 | Body-R | SM001-019 | pp | | |
| 20 | Body-L | SM001-020 | pp | | Inapplicable |
| 21 | Assy-Solenoid Valve | SM001-021 | AC220V | | to Bure3 |
| 21-1 | Assy-Solenoid Valve | SM001-021-1 | AC115V | Inapplicable to Bure3, Bure3 New | |
| 22 | Main-PCB | SM001-022 | AC220V | | |
| 22-1 | Main-PC8 | SM001-022-1 | AC115V | | Applicable to Bure3,Bure3 Nev |
| 23 | Power-Cord | SM001-023 | KP-2 L=2MT | | Applicable to Bure3,Bure3 Nev |
| 23-1 | Power-Cord | SM001-023-1 | KP-2 L=6MT | | Applicable to Bure3, Bure3 Nev |
| 23-2 | Power-Cord | SM001-023-2 | KP-2 L=15MT | | Parts soldseparately |
| 23-3 | Power-Cord | SM001-023-3 | KP-2 L=30MT | | Parts soldseparately |

3.bmp (516 X 728)

Notes and How to use Notes



Notes

- This product is used only for 220V.
- In replacing a fuse, it is necessary to use only the proper fuse, if you use one other than the proper fuse, fire or error can occur, Rating(250V 10A)
- In providing and mixing chemicals, you should follow the corresponding guidelines.
- In handling and spraying toxic chemicals, you should wear protective equipment,
- Only the person with sufficient related knowledge should operate the machine.
- Don't put flammable agents(gasoline, thinner, kerosene, diesel and so on)into the chemical bottle.
- It is necessary to push the air release push button until the air is completely released after use.
- Be cautious about firearms and shock.
- It is necessary to wash the chemical bottle with water and to spray water into it for 30~60 seconds after use,
 (Otherwise the product can be blocked or damaged due to the remaining chemical,)
- The machine is wet or sinks into water, it should not be supplied with power,
 In this case, you should contact our service center, it can cause fire or electric shock,
- In checking error or putting chemicals, it is necessary to disconnect the power cord,
- It is necessary to look around and to be careful so as not to spray others in spraying chemicals.
- It should be kept in the places where children can't approach,
- Its users should not be release or modify the product as they want.
 It can cause errors and malfunction to the product and lead to fire or electric shock,
 - (The product released or modified can't receive AS.)

Notes and How to use Notes



How to use

In spraying or cleaning chemicals

- *, In using the product
 - Insert chemicals in proper amount into the chemical bottle and turn its cap to the right,
 - Connect the chemical bottle with the chemical to its body, (Connect them until the chemical bottle separation/connection button connects to the body with "ddak" sound.)
 - Turn the chemical control lever of the chemical bottle to the right in order to place the chemical bottle valve in the close position,
 - Plug the power cord at the outlet,
 - While moving the slide controller to the "Strong" Position, turn the chemical control lever to the left to open the valve, (For Bure 3 and Bure 3 New, place the power switch "IN" Position.)
- *. In finishing the use,
 - Turn the chemical control lever of the chemical bottle to the right to close the chemical control valve.
 - Place the slide controller in the "Weak" position,
 - ◆ Wait for about 4-5 seconds until the motor stops,
 - Push the Air release push button(on the cap of the chemical bottle) until all the air is released,
 - Separate the chemical bottle from the body, (It is possible to remove the chemical bottle by pushing the separation button.)
 - While moving the slide controller to the "Strong" Position, turn the chemical control lever to the left to open the valve, (When spraying is completed, it is necessary to operate the body until the air is released.)
 - Keep the chemical bottle connected with the body.

In air-spraying and cleaning

- Separate the chemical bottle from the body, (It is possible to remove the chemical bottle by pushing the separation button.)
- Turn the nozzle cap for spraying to the left to separate from the body.
- Assemble the wrinkle hose to the nozzle cap for cleaning and then to the body.
- Place the slide controller in the "Strong" position and spray air to the place you want.
 - * After air spraying and cleaning, it is necessary to replace the nozzle cap for cleaning with one for spraying.
 - → If you use the nozzle cap for cleaning, it is impossible to clean,

Measures for errors and maintenance




How to take measures for errors

| Condition | Measures | Remark | |
|--|---|---|--|
| Although the slide controller is placed on "Strong", motor doesn't operate, | ◆ Check whether the power cord of the product is plugged at the outlet. ◆ Check whether the power cord jack and power cord of the product are connected. ◆ Check whether the power fuse is normal. − Check the fuse in the fuse—holder assembled on the body. − Check the fuse in the fuse—holder on the rear of the product. | If there are still errors after taking measures, request A/S, * Use the fuse with the proper capacity in replacing fuses, (250V/10A) | |
| Although the motor operates normally, the chemical isn't sprayed, | ◆ Check whether the chemical bottle is normally placed on the body. ◆ Check whether the control valve of the chemical bottle is closed. ◆ Check whether the cap of the chemical bottle is closed completely. ◆ Check whether the chemical bottle is damaged, (If so, it is necessary to buy the chemical bottle.) ◆ Check whether the O-ring of connector to connect the body and the chemical bottle is damaged, (If so, its rating: internal diameter: 7,5 and external diameter: 10,5) ◆ Check whether the nozzle cap for cleaning with big hole size is place and then replace it with one with small hole size, ◆ After releasing the chemical bottle, insert the air of 1kg/m² into the left hole of the connector in the body and remove the foreign matters within it, ◆ After releasing the body of the product and its solenoid valve, clean it and reassemble, (Refer to the manual for Solenoid valve A/S) | - For the nozzle cap with big hole size(diameter 35), it is used for air cleaning. If there are still errors after taking measures, request A/S, | |
| Although the motor operates normally, the chemical is sprayed intermittently. | ◆ Check whether the chemical bottle is normally placed on the body. ◆ Check whether the control valve of the chemical bottle is closed. ◆ Check whether the cap of the chemical bottle is closed completely. ◆ Check whether the chemical bottle is damaged. (If so, it is necessary to buy the chemical bottle.) ◆ After releasing the chemical bottle, insert the air of tkg/m² into the left hole of the connector in the body and remove the foreign matters within it. ◆ After releasing the body of the product and its solenoid valve, clean it and reassemble, (Refer to the manual for Solenoid valve A/S) ◆ After releasing the body of the product, check whether the pipe is connected normally and reassemble it again. ◆ Check whether the pipe hose within the product is damaged, If so, replace it with another. | If there are still errors after taking measures, request A/S, | |

Measures for errors and maintenance



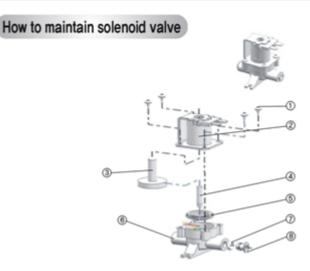

1. Part-List

| No | Part-Name | Code-No | Spec | Q'ty | Remark |
|----|---------------------|------------|----------------|------|------------|
| | Solenoid-Valve Assy | SM001-020 | AC 220V | | |
| | | SM001-021 | AC 110V | | |
| 1 | Screw-Tap | | PH 2s-4*10 fez | 4 | |
| 2 | elec-solenoid | | 220 ~ 240V | 1 | no service |
| 3 | Case-Shaft | | PP | 1 | |
| 4 | Shaft-Assy | SM001-0024 | scp1+Rubber | 1 | spare-Part |
| 5 | Diaphragm | SM001-0025 | POM+Rubber | 1 | spare-Part |
| 6 | Body | | POM | 1 | no-service |
| 7 | O - Ring | SM001-0026 | Rubber | 1 | |
| 8 | Cap-Peating | SM001-0027 | POM | 1 | |

2. How to release and assemble the solenoid valve

- 1, Release the screw of ① (4 places)
- 2. Release (2)(Elec-Solenoid),
- 3, Release (3)(Case-Shaft),
- 4. Release @(Shaft-Assy) and then check whether the rubber of the end is expanded.
- 5. Separate (5)(Diaphragm) from (6) the body and then check
 - Whether the rubber is damaged(expanded or torn), (If so, replace it with its spare-part,)
 - Whether the foreign matters pollutes the rubber, And then remove the foreign matters.)
- 6. The order for re-assembling is reverse,

Warranty & Quality guarantee

| SM BURE Co., Ltd | | | | | | |
|------------------------------|-----------|--|--|--|--|--|
| Name of product | BURE | | | | | |
| Series number of manufacture | cture No. | | | | | |
| Date of Sale | 20 | | | | | |
| Period of guarantee | 1Year | | | | | |

Guidelines for Service compensation according to Quality guarantee

| Dissatisfac | tion type | Dissatisfaction type for quality guarantee Within guarantee period after guarantee period | | |
|--|----------------------|---|---|-----------------|
| | Repair | When errors happens | Repair for free | Repair for free |
| Performance or function error | possible | When errors reoccur although repairing the same errors three times | Exchange products | Repair at cost |
| caused in normal conditions | | | Exchange products | _ |
| | | is necessary to repair the nt parts right after purchase | Exchange products | _ |
| Performance or function error caused by. | Repair possible | | Repair | at cost |
| consumers intentional mistake | Repair impossible | Except the cases by external error, not performance or function error | Exchange products after receiving the cost for the repair | _ |

^{*} What is not specified is according to the company's additional compensation guidelines. And if the date of purchase is not specified in the guarantee, its guarantee period after the date of manufacture applies.

Guidelines for Service

■If there is an error while using the product, please review the manual and then contact a special agent or service center where you purchase it, Condition for guarantee

■Free service

- It is possible to repair for free if you use the product in normal condition within 1 year(600 Operating hours) from the date of purchase,
- ■Service at cost
- In the following cases, you should pay the cost of service(repair cost, part cost),
- 1, Excess of the guarantee period
- 2. Within the guarantee period
- -Error caused by natural disasters(fire, gas explosion, damage from
- sea wind, flood, earthquake, lightening and so on)
- -Error caused by negligence and mishandling
- -Error caused when the person other than the service engineers of our service centers
- -When the products are dissembled or their labels are detached
- -Error caused by the malfunction of power or connector
- -When the products are used for ones other than specified purposes
- -Natural consumption of consumables
- -Error caused by the internal modification by users
- -Error caused by the thinner or firearm
- ■We should not be responsible for the safety accident caused by the negligence of users,
- ■The products specified in this manual can be discontinued or modified without any notice, Please check it in purchase, if there is an error or dissatisfaction in use, contact service centers or the places where you purchase the product,

SM BURE Co., Ltd Tel.+82-1688-1533

> 8.bmp (466 X 659)